





## FT-805 Hydraulic Grooming Table



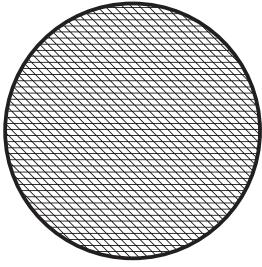

Anti-slip tabletop

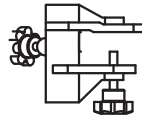


Clamp




Single grooming arm




Nylon rope

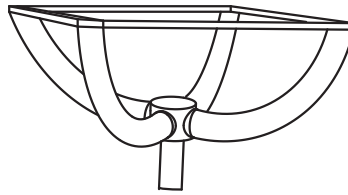

Frame

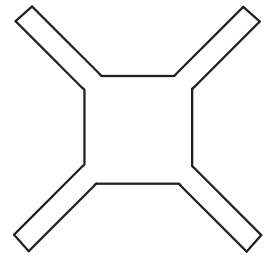

Frame base

 

Hydraulic pump



Hydraulic pump casing



Foot leveler\*4pcs



Hydraulic pump foot lever



M6 nuts\*4pcs



Spring washers\*4pcs



Washers for M10 screws connecting frame and hydraulic pump



Washers for hydraulic pump fixing screws\*4pcs



M10\*40 hex screws for connecting frame and hydraulic pump




Self-tapping screws for securing tabletop to frame\*8pcs


# Installation Steps



Install 4pcs foot levelers onto the bottom frame

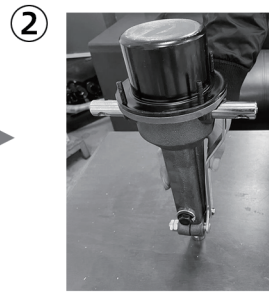


Loos en the fixing screws of the hydraulic pump.

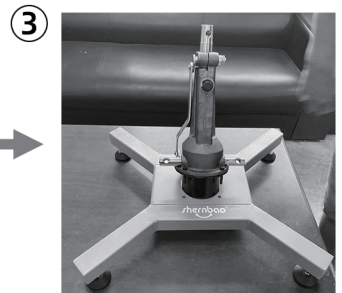


Mount the hydraulic pump onto the bottom foot.



Correctly install the hydraulic foot pedal according to the diagram.

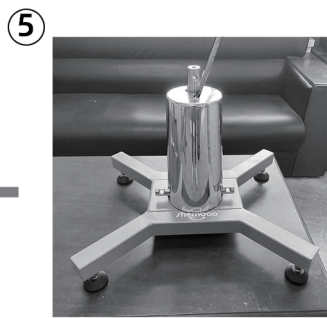

Securely fasten the decorative cover of the hydraulic pump with fixing screws.

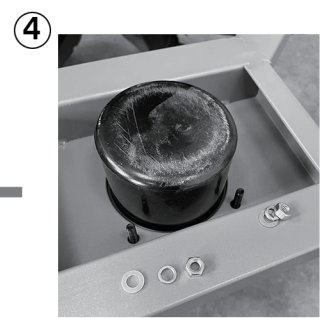

Install and tighten the nuts and washers.



Use self-tapping screws to secure the tabletop to the frame.



Use M10\*40 hex screws to tighten according to the diagram.



Assembly of the main body is completed.



Install the single grooming arm and nylon rope and done.



Install the clamp on the edge of the tabletop.

# Warnings

- 1.This product is not intended for use by individuals with physical disabilities, delayed reactions, or mental disorders (including children), unless supervised by a caregiver who can provide guidance on its use and take responsibility for the user's safety.
- 2.Keep children away from the lifting range of this product to prevent accidents.
- 3.Do not disassemble the product yourself if there are abnormalities or malfunctions during use.
- 4.Do not rinse with water or submerge in water.
- 5.Avoid humid environments and keep the surroundings dry.
- 6.Rinsing or submerging in water may damage pneumatic control components.
- 7.Avoid contact with corrosive liquids or solids.
- 8.To clean the tabletop, frame, and pump, use a dry cloth and an air blower to remove surface residues such as hair, excrement, water stains, and other dirt.

## Limited Warranty Statement

### Warranty Terms

Your table is guaranteed free from material and manufacturing defects. The purchaser is covered for six months from the date of purchase (limited to air-lifting pump components only). In case of malfunction during the warranty period, please contact our company or your local distributor promptly for assistance and resolution.

To claim warranty service, please provide the invoice and other supporting documents. In case of loss, the warranty period will be calculated from one month after our factory date code plus six months.

### Warranty Coverage

This warranty does not cover faults and damages resulting from operating environment, natural causes, or improper maintenance.

### Limitation of Liability

Under no circumstances shall our company be liable for third-party claims you incur (including special, incidental, or consequential damages), or any economic loss such as profits, business revenue, goodwill, or anticipated savings.